



OPERATING INSTRUCTIONS

MIP™ System Plug-in Door Chime




MODEL: B7505

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

1. 32 Melodies
2. 240v Mains operated plug-in door chime
3. Bell push
4. Flashing LED strobe
5. Volume controls
6. Melody selector
7. Bell push transmitter (requires 1 x A23 battery included)
8. Chime playback button

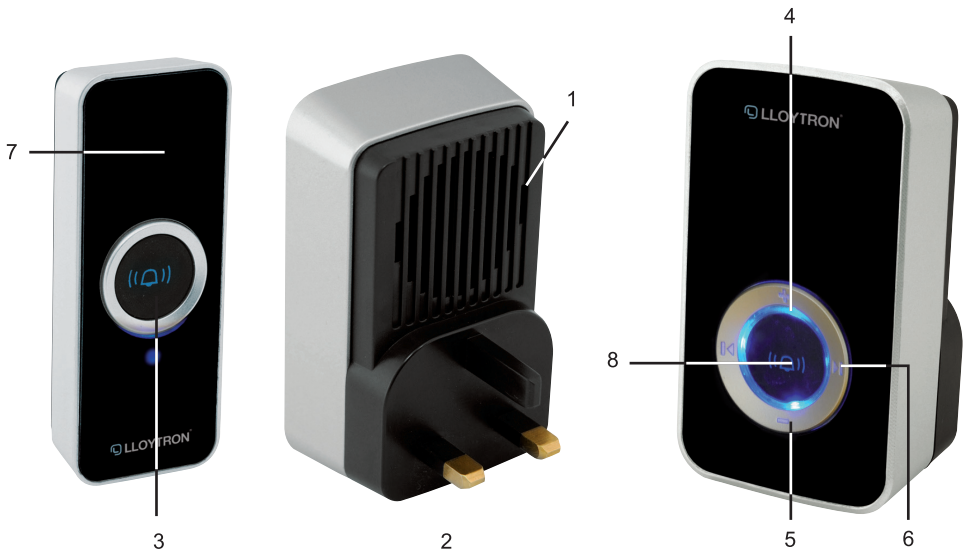

SPECIFICATIONS

Power source: 240v - 50Hz 0.7w power

Chimes: Ding-dong, Ding-dong ding-dong, Knock door, Jingle bells, Happy birthday, For Alice, Minuet, Merry christmas, Westminster, Birdsong 1, Birdsong 2, Cuckoo, Oh Susanna, The Yellow Rose of Texas, Santa Claus, My Old Kentucky Home, Frosty the Snowman, Minuet (Bach), Arabia music, Wedding in the Dream, Doreamon, Silent Night, Auld Lang Syne, Swan Lake, Jasmine, Butterfly Love, Turkey March.



IMPORTANT SAFEGUARDS AND PRECAUTIONS



SAVE THESE INSTRUCTIONS

- Save these instructions.
- Read all instructions carefully
- For household use only.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Keep away from hot surfaces
- Do not use for any purposes other than the intended use.
- Do not use if any part is damaged in any way.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water.
- This product is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this appliance.
- Cleaning and user maintenance shall not be made by children.
- Never let children push anything into holes or slots in the cabinet or casing – this could result in an electric shock.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.

MIP™ SYSTEM

This Door Chime can automatically learn the frequency of other MiP™ System modules including additional Bell Push transmitters and Door Chime receivers. This is useful if you wish to use more than one Bell Push or Door Chime or require a replacement for either.

RESET TO FACTORY DEFAULT SETTINGS

This may be required in certain circumstances such as incorrect programming of accessories or if faulty. There is no need to reset to factory default at any other time.

1. Switch the power off by removing the batteries or removing the plug from the mains socket (dependant upon model).
2. Press and Hold the Chime Playback Button.
3. Still Holding the Chime Playback Button, switch the power back on by plugging the Door Chime into the mains socket or inserting the Batteries (dependant upon model).
4. Continue to hold the Chime Playback Button for 10 seconds, after which the strobe will flash or an audible beep will sound, indicating that the memory is now clear and ready for programming.

To re-programme the MIP™ system, please continue to the 'How to Programme' section.

HOW TO PROGRAMME

1. On each Receiver, select and hold the "Chime Playback" Button for 10 seconds. An audible "beep" will be heard. The Receiver is now in a waiting mode.
2. Press the Bell Push or turn on the PIR (Transmitter) and an audible beep will be heard again. The Receiver is now being programmed.
3. To exit the programming mode, press and hold the "Chime Playback" button again or wait a further 10 seconds until a "beep beep" is heard and the programming is finished.

Please Note: If multiple receivers are used then each receiver must be programmed to each bell push individually.

Up to 4 receivers and 4 transmitters can be programmed together at any one time.

Note: This is only compatible with products highlighting the MiP™ System

OPERATION

INSTALLING THE BELL PUSH

1. Pry open the Bell Push unit.
2. Mount the bell push into an upright position onto a wall or doorframe by using the screws supplied or the double- sided sticky pad.
3. Insert a 12 Volt DC 'A23' size battery (included), ensuring the battery polarity matches the internal marking.
4. Replace the cover and press to lock into position.

CHIME SELECTION

To move through the various melodies, continuously Press the '<' or '>|' until you have found the Chime of your choice.

CURRENT MELODY PLAYBACK - Press centre button on the receiver to play back current tune.

VOLUME CONTROL - Press "+" or "-" to change volume to desired level.

NOTE: The battery can be used for approximately one year. If the chime sounds distorted or faint, replace the old batteries with fresh ones.

IMPORTANT -

This wireless Door chime has an operating distance of 150 metres, but local conditions and the number of walls may affect this. Metal door frames and other factors that interfere with the signal will reduce the operating distance.

TROUBLESHOOTING

If the Receiver automatically sounds, reset to factory default setting and then re-programme.

CLEANING AND CARE

Wipe with a clean soft cloth only.

Do not wash with detergent or use any form of solvent.

WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the Proper treatment, recovery and recycling please take this product to the appropriate waste collection point.

If you are unsure where this may be, please contact your local authority.

Improper disposal may be harmful to the environment

MIP™ ACCESSORIES AVAILABLE

TRANSMITTERS



MODEL NO.
B7801BK/WH.

BELL PUSH IN
BLACK OR WHITE.

IDEAL FOR THOSE
ADDITIONAL DOORS.

RECEIVERS



MODEL NO.
B7902WH.

BATTERY OPERATED 32
MELODY DOOR CHIME.

GREAT PORTABILITY
FOR GARDENS OR ON
THE MOVE IN THE HOME.

MODEL NO.
B7810WH.

PIR MOTION
SENSOR.

FOR GARAGES,
HALLWAYS,
DRIVEWAYS OR
RETAIL SHOPS.



MODEL NO.
B7951BK/WH.

MAINS PLUG-IN 32
MELODY DOOR CHIME
IN BLACK OR WHITE.

ADDITIONAL PLUG-IN
DOOR CHIME.



MODEL NO.
B7811WH.

MAGNETIC DOOR
SENSOR.

FOR CONSERVATORY
DOORS, VESTIBULE
DOORS OR
RETAIL SHOPS.

LOOK OUT FOR MORE ACCESSORIES.

ALL MIP™ SYSTEM PRODUCTS ARE
FULLY COMPATIBLE WITH
EACH OTHER!



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron MIP™ products please visit our website at www.MIP-Doorchimes.com
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K